


IMPORTANT !!
STARTER COIL MUST BE SPECIFIED AS
230 VOLTS A.C.
MISMATCH OF INPUT VOLTAGE & COIL
VOLTAGE WILL DAMAGE EQUIPMENT
AND VOID AUTODUAL AND STARTER WARRANTY

FROM MAIN POWER
DISCONNECT BOX

**MAIN POWER IN
TO STARTER
230VAC 1Ø OR 3Ø**

LINE L3
USED ON
3Ø ONLY

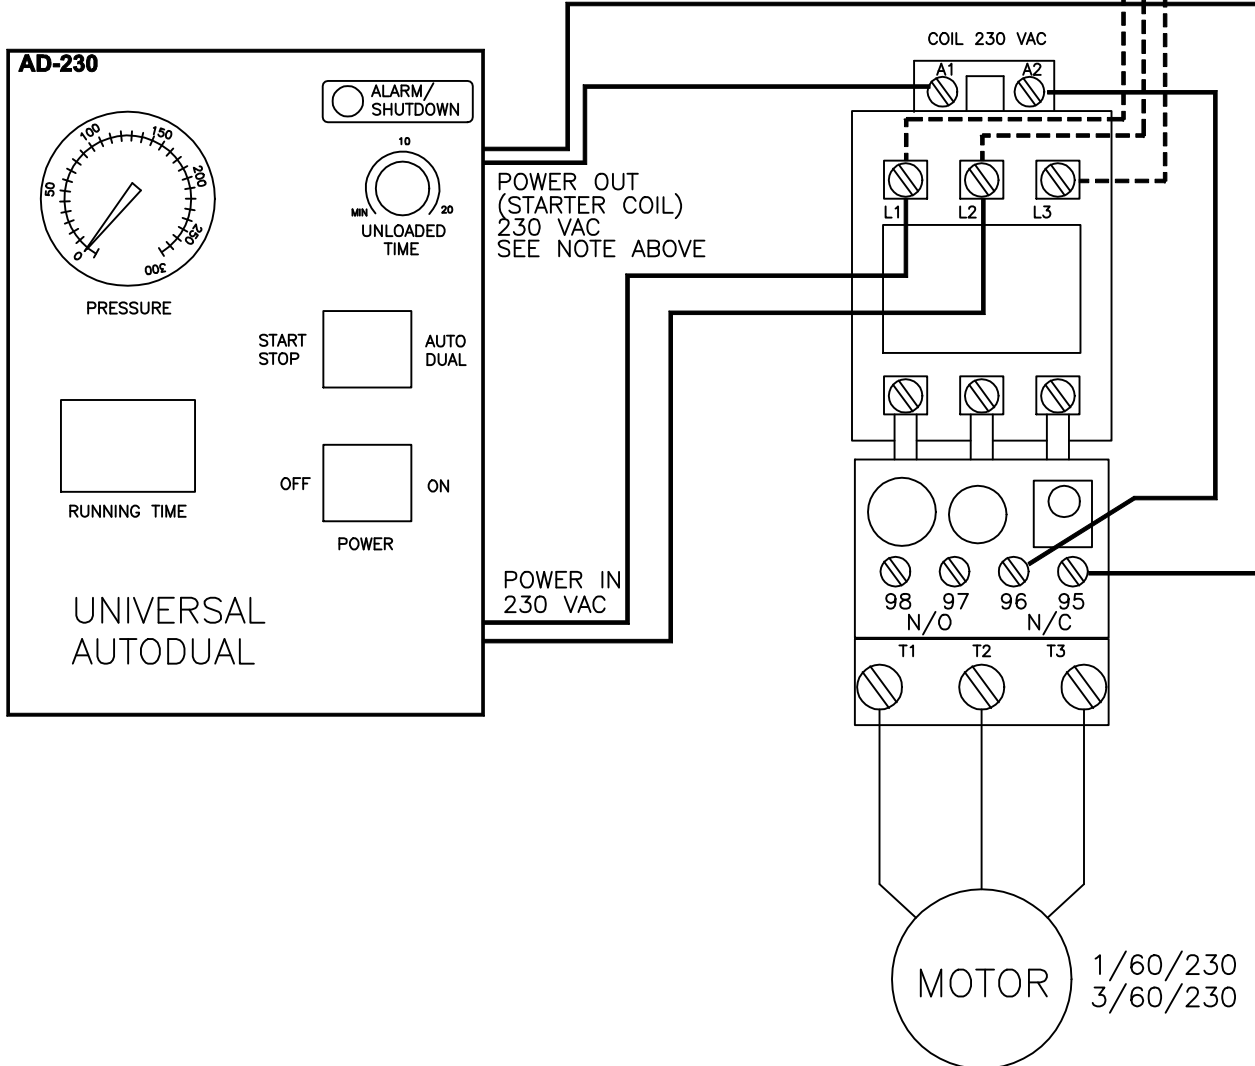

AUTODUAL WIRING - 230VAC 1Ø OR 3Ø
230V STARTER COIL VOLTAGE
W/O CONTROL VOLTAGE TRANSFORMER