


UNIVERSAL AUTODUAL/STARTER COMBINATION GENERAL ARRANGEMENT MODEL ADS

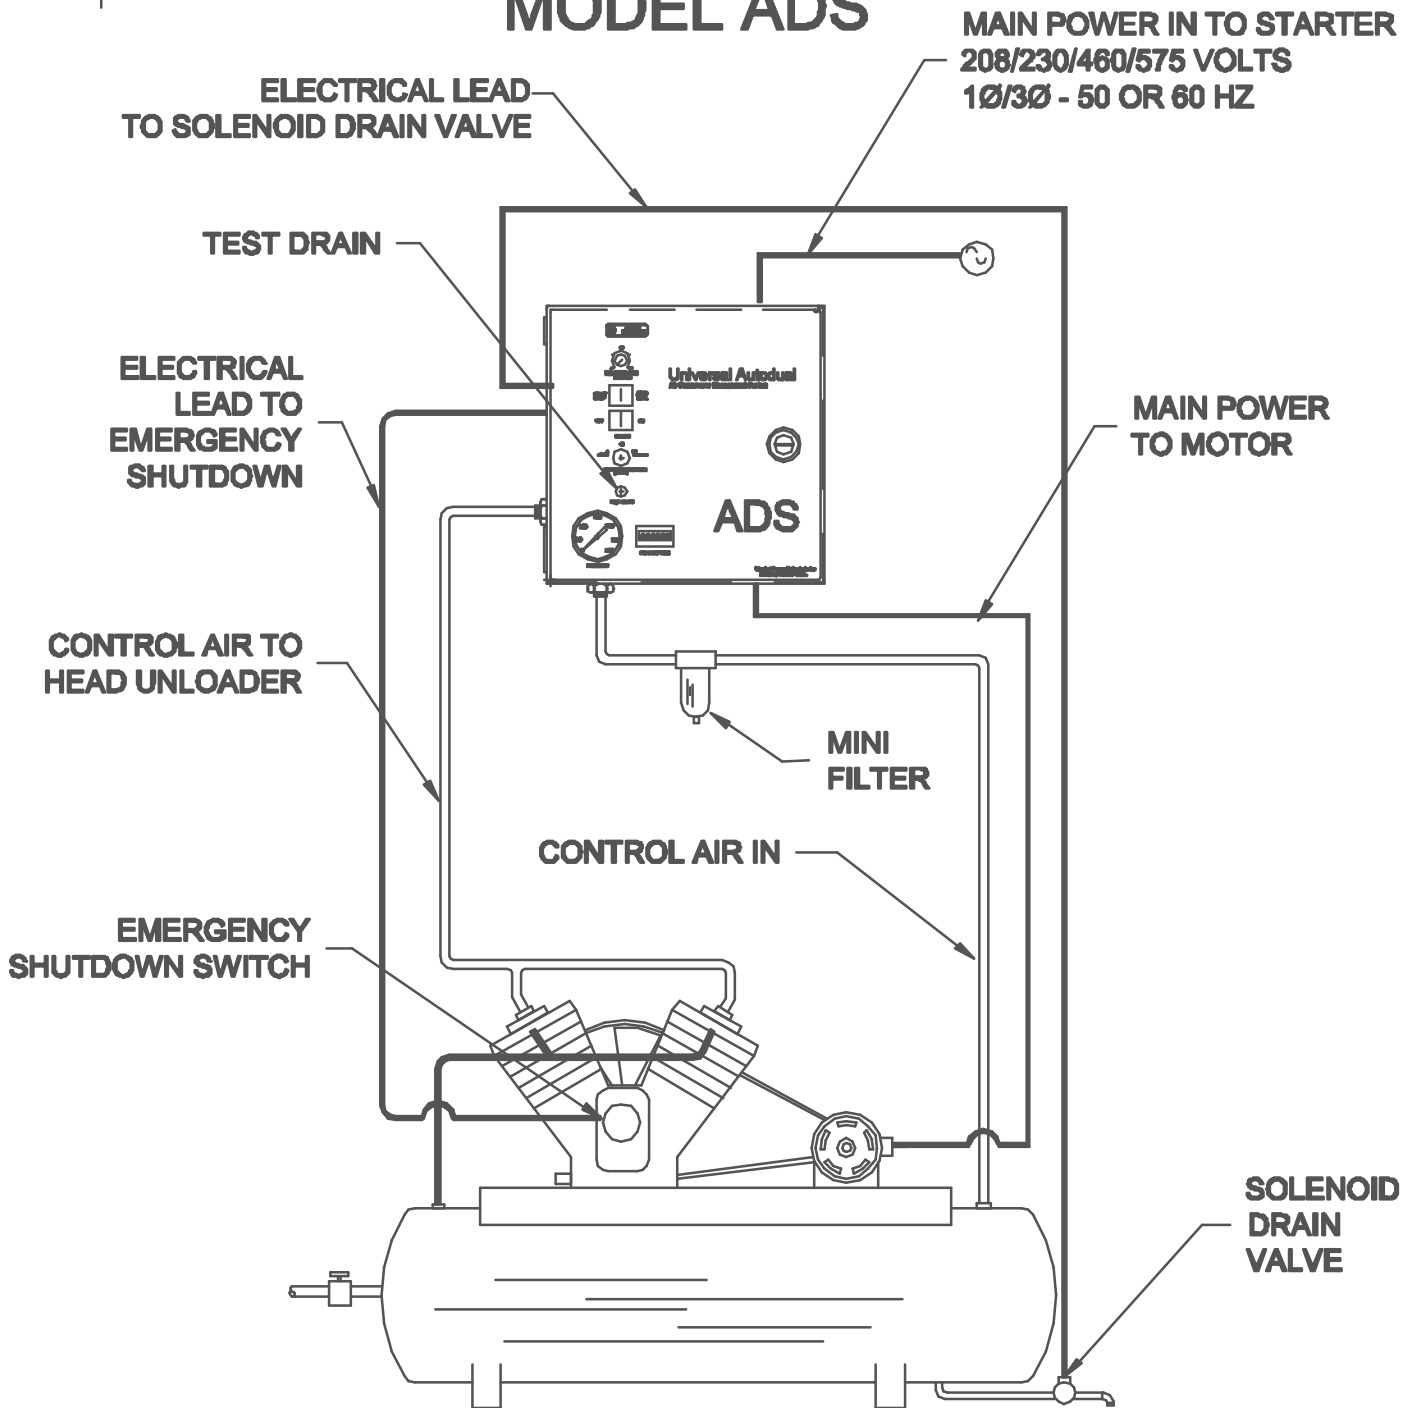

ADS CONTROL CONNECTIONS

ELECTRICAL:

- 1) POWER IN TO ADS
- 2) POWER OUT TO MOTOR

PNEUMATIC:

- 1) CONTROL AIR FROM TANK TO ADS
- 2) CONTROL AIR OUT TO HEAD UNLOADER